



FootSwitch
n/a

ANY SOLO

AUTO
WRITE
READ

Rec Arm

Solo

Mute

SHIFT

LEGEND
Normal
Shift

FL Studio 8

Vol 104% 1.0dB
Master



PAN SEND EQ PLUG-IN AUTO

Redo Undo Previous Pattern Next Pattern

F1 F2 F3 F4

Previous Track Next Track Toggle Pat/Song mode Bring Rear Window Fwd.
Set Start, Clear Region Set End Hold to Select Region

RTZ END ESC ENTER MODE

Rewind Decelerate Playback	Fast Forward Accelerate Playback	Stop Close Playlist	Play Toggle Playlist Fullscre	Record
-------------------------------	-------------------------------------	------------------------	----------------------------------	--------

Left Tap One Finger Two Finger Right Tap
Shuttle Timeline

FRONTIER



Pan Mode

Pan St. Separation

Send Mode

Send 1 Level Send 2 Level Send 3 Level
Shift Send 2 Level Send 3 Level Send 4 Level

EQ Mode

Band 1 Gain Band 2 Gain Band 3 Gain
Shift Band 1 Freq Band 2 Freq Band 3 Freq

Plug-In Mode

Knob 1 Knob 2 Knob 3
Shift Knob 4 Knob 5 Knob 6

Auto Mode

Pattern Track Channel

Notes

Press (click) encoders to center Pan or reset many levels. Shift button is a toggle switch and does not automatically release.