



Pan Mode

Push+Turn Select FX Para Para Value Adj.

Select Insert Fine Adjust

Notes

Encoder 1 is used for Pan control unless Flip is enabled. Encoders 2 and 3 are used to select and edit FX Insert parameters.