



### Live Layout

3TrkNm It Ext.In  
X05:23.12

FootSwitch  
Record

ANY SOLO  
AUTO  
WRITE  
READ

Arm Track  
Nonexcl. Arm

Solo Track  
Nonexcl. Solo

Mute Track  
Motor On/off

SHIFT

LEGEND  
Normal  
Shift

PAN SEND EQ PLUG-IN AUTO

User Mapped User Mapped User Mapped User Mapped  
User Mapped User Mapped User Mapped User Mapped

Previous Track Next Track Toggle Loop Toggle Flip  
Punch In Punch Out SMPTE/Beats Arr/Session

RTZ END ESC ENTER MODE  
Rewind FForward Stop Play Record  
Home (RTZ) End (Local settings) Add Locator Back to Arrangement

Left Tap One Finger Two Finger Right Tap  
Prev. Locator Scrub Shuttle Next Locator  
Hor. Zoom Vert. Zoom

FRONTIER



### Pan Mode

Turn	Track Select	Pan Value
Push	Track/Master	Pan Default
Push-Turn		Fine Value

### Send Mode

Turn	Track Select	Send Select	Send Level
Push	Track/Master		Send Default
Push-Turn			Fine Level

### EQ Mode

Turn	Track Select	I/O Select
Push	Track/Master	Next I/O
Push-Turn		

### Plug-In Mode

Turn	Track Select	Select Param	Param Value
Push	Track/Master		Param Default
Push-Turn			Fine Value

### Auto Mode

Turn	Track Select	Track Select	Scene Select
Push	Track/Master	Launch Clip	Launch Scene
Push-Turn			

### Notes

ANY SOLO LED shows "Any Solo"  
 AUTO WRITE LED shows "BTA" is activated  
 AUTO READ LED is unused  
 In AUTO mode, SHIFT+middle\_enc\_push turns the current clip off.  
 All touchstrip functions are user mappable in Session Mode. (Think crossfade functions!)  
 Not shown are the 5 user-mappable modes, each with a mappable fader and 3 mappable knobs.