



### Pan Mode

Page 1	Track #	Sel. Marker	Adj. Pan/Trim
Page 2	Surr. Width	Surr. Focus	Surr. Angle
Shift	Track #		Sel. Pan/Trim

### Send Mode

Page 1	Send #	Send Level	Send Pan/Angle
Page 2	Send #	Send Enable	Pre/Post
Shift	Track #		

### EQ Mode

Page 1	Frequency	Gain	Q
Page 2	Band Select	Filter Type	Band En/Dis
Shift	Track #	EQ Type	EQ En/Dis

### Plug-In Mode

Standard	Plug-in Select	Parameter	Value
ACT 1	Control 1	Control 2	Control 3
ACT 2	Control 4	Control 5	Control 6
Shift	Track #		

### Auto Mode

Normal	Track #	Read On/off	Write On/off
--------	---------	-------------	--------------

### Notes

On/Off type controls can sometimes be toggled by pushing the encoder.  
 \*\*User-programmable; default behavior is shown.  
 Hold Shift+ tap touchstrip to toggle audible scrub/shuttle on/off. Marker navigation is disabled when audible scrub is On.

FootSwitch  
Record\*\*

ANY SOLO  
AUTO  
WRITE  
READ

Arm Track  
All Safe  
Solo Track  
Clear Solos  
Mute Track  
Clear Mutes

LEGEND  
Normal  
Shift

Freq 100 Gain 0.5 Q 1.2

Recall #1\*\* Set #1\*\*  
 Recall #2\*\* Set #2\*\*  
 Recall #3\*\* Set #3\*\*  
 Recall #4\*\* Set #4\*\*  
 Next Track Set Loop In  
 Prev Track Set Loop Out  
 Toggle Loop Toggle Punch  
 Flip Motor On/Off

Rewind Return To Zero  
 Fast Forward Go to End  
 Stop Local Settings  
 Play Play Metron.  
 Record Record Metron.

Left Tap Prev Mark  
 No marker nav when audibl  
 One Finger Scrub  
 Shift+tap to turn audio O  
 Two Finger Shuttle  
 Shift+tap to turn audio O  
 Right Tap Next Mark

FRONTIER